

## Double Locking Runner Installation Guide to Corbeau Sportline Seat



### Step 1

Remove bolts from seat base and place these to one side as you will require these later.


Front of Seat



Back of Seat

### **Step 2**

Make sure you are aligning the runners with the correct bolt hole pattern, otherwise the handle will not fit correctly.

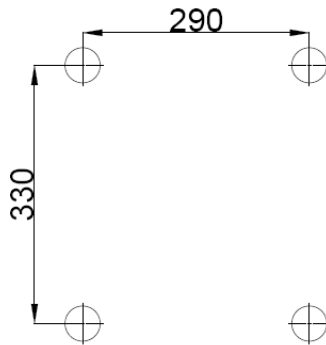

### **Step 3**

Extend both runners as shown below to expose the mounting holes. The small circular washers included with the runners must be used between the seat base and the runner.



### **Step 4**

Take one of the extended runners and place it on the seat base. The writing on the runners should be facing outwards so it is still visible when the runners are fitted and the 'clips' for the runner handle should be closest to the front of the seat.



### **Step 5**

Place a small circular washer on the underside of the seat bolt head and insert seat bolt through runner and lightly tighten.



### **Step 6**

Extend runner in opposite direction and repeat step 5. Then fully tighten both bolts. Repeat step 5 and 6 for opposite runner.

### **Step 7**

Once both runners are in place and the bolts have been tightened the handle is ready to be fitted. The handle has a slight bend in it, this should be placed so the bend faces downwards (towards the floor when the seat is fitted) Insert the handle into the pin on one side of the runners.



### **Final Step**

Compress the handle and insert the pin on the opposite side. The handle should sit inside the clips on both side of the runners also.

**Please note the oblong washers in the runner bolt kit are to be used to bolt the runners to either a subframe or the chassis of the car.**